


Remove the ski tip from the lower leg

Remove the pivot bolt with a 5/32 inch or 4mm Allen wrench. Please observe where you flip ski spring and the delrin pin are located before you take them a part.

Pic.#1

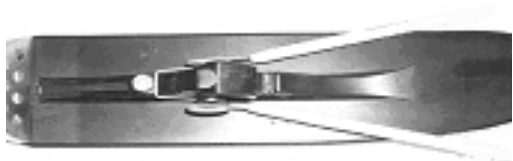

- 1- Put the spring in place then use 2 empty ball pens to slide over the two ends of the spring for easy to handle the spring. (Pic.#1)

OUTRIGGER's SKI-TIP ASSEMBLY INSTRUCTIONS



Delrin pin/spring


- 2- Place your left hand under the ball pens. Use both hands to hold the spring in place, keep the pin with the spring inside the lower leg. (Pic.#2)




Pic #3

- 3- While holding the spring in place push both pens down and toward your right hand, then slide the lower leg over the spring (Pic. #3).

Pic #4

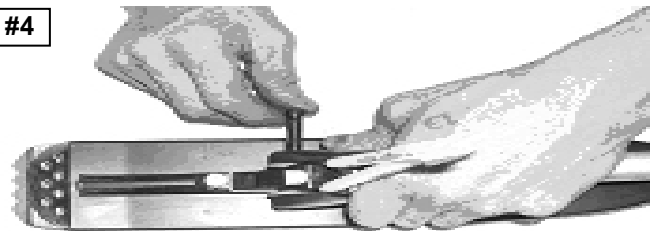

- 4- Keep the lower leg and the ski tip lined up so that you can push the allen bolt into the hole. Use 5/32 inch or 4mm allen wrench to tighten the allen bolt in place.(Pic. # 4)

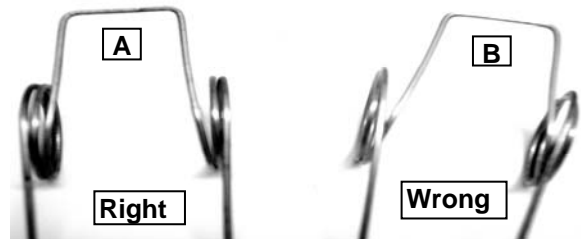

- 5- Make sure the spring looks the same as in picture A not B. If not you can use a small flat screwdriver to straighten the spring (Pic. #5)